

Wireless Fan

User Manual



Contents

- 01. Product Introduction
- 02. Product Parameters
- 03. Product Description
- 04. How to Use
- 10. Extended Functions
- 13. Precautions

Product Introduction

The wireless fan is a fan product with strong wind power, long battery life, low noise, detachable and small storage volume. Thanks to the excellent motor and fan blade structure design of engineers, as well as the continuous optimization and improvement of materials, it has better wind power, battery life and service life than many similar products.

The wireless fan is powered by connecting to the energy treasure, so it does not rely on traditional wired power supply, so it can be used in more life and outdoor scenes.

Its fan blades and protective covers can be disassembled to make it smaller, and we can easily carry it outdoors for use. The fan blades are equipped with a protection function. When we accidentally touch the fan blades, the fan blades will start the protection program to stop rotating to protect the human body.

Product Parameters


Product Name	Wireless Fan	Lighting	3W
Product Model	BY-FS01	Fan Blade Diameter	260mm
Dimensions	290mm*290mm*104mm	Bracket Mounting Screws	Imperial 1/4
Weight	357g	Safety Protection	Touch to Stop
Power	9W	Maximum Battery Life	Depends on the model of the energy treasure, such as 152B or 152C models: the first gear has a battery life of 26 hours, the second gear has a battery life of 15 hours, and the third gear has a battery life of 10 hours.
Contact Input Voltage	12V		
DC Input Voltage	12V		

Product Description



How to use


1. Install the three fan blades into the fan blade seat one by one. When they are inserted to the bottom, you will hear a "click" sound, indicating that the installation is successful.

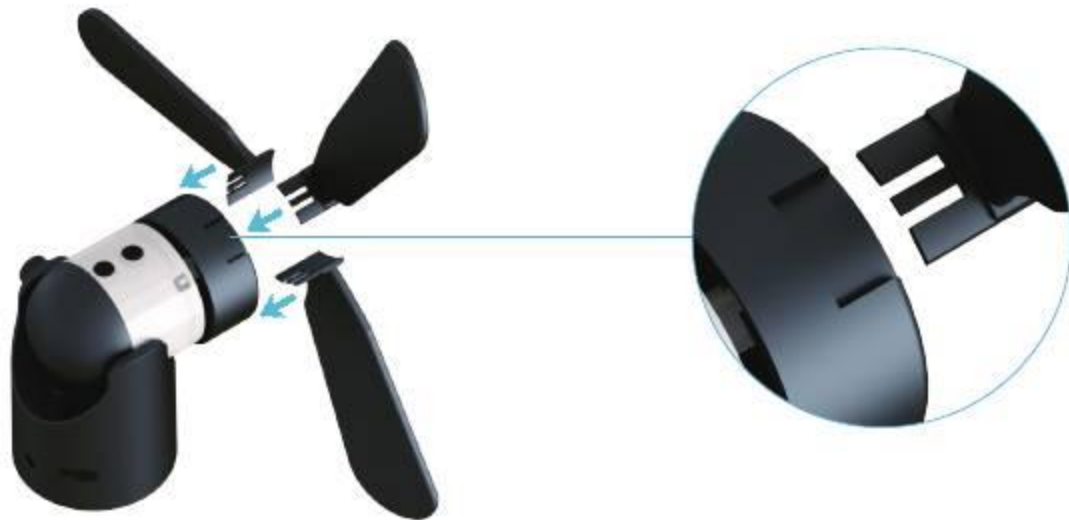

2. Before use, please insert the support rods of the 4 sets of fan blade protection covers into the 4 holes on the fan lamp cover. After inserting to the bottom, plug and connect the ends of the 8 blades on the 4 sets of support rods in turn to form a complete circular protection cover.



3. Remove the Energy Treasure decorative ring, align the unlocking mark of the Energy Treasure with the triangular mark on the fan installation interface, and rotate to connect. When the locking mark on the Energy Treasure is aligned with the triangular mark on the fan, the installation is successful.

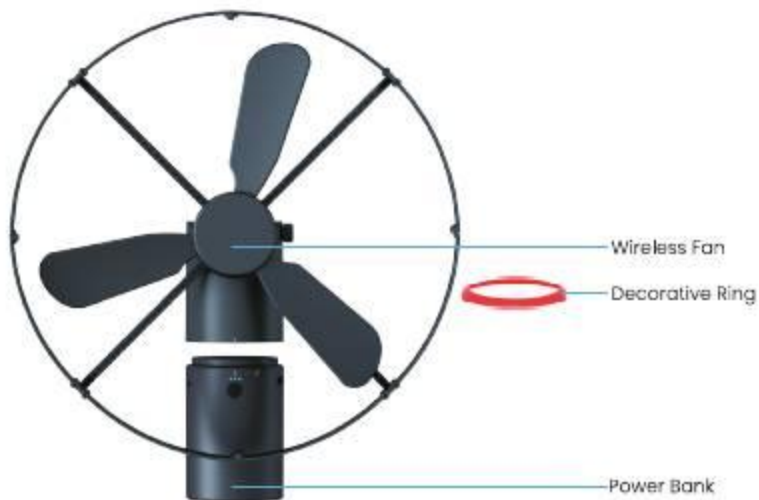

4. Press the power switch of the energy treasure, then press the fan switch lightly to turn on the first gear of the fan, the indicator light is green, press the fan switch again within 2.5 seconds to turn on the second gear of the fan, the indicator light is blue-green, press again to turn on the third gear, the indicator light is blue, and the third gear is the maximum wind speed gear. Regardless of which gear it is in, if you press the fan switch again after more than 2.5 seconds, the fan will be turned off directly.

5. Press the LED switch to turn on the first gear of the LED light, which will light up the entire lampshade. Press again within 2.5 seconds to turn on the second and third gears in turn, and the third gear is the brightest.



6. The fan can be adjusted 180° up and down. There is a tightening button on the side. After rotating it to the required angle, tighten the button to fix the direction.



7. The fan switch button and LED switch button of the remote control have the same function as the switch button of the lampshade. The remote control is equipped with a timing function. The "3H" button turns off the fan and LED light after 3 hours of timing. The indicator light is yellow after turning it on. The "6H" button turns off the fan and LED light after 6 hours of timing. The indicator light is red after turning it on. After turning on the timing, if you need to cancel it, just turn off the fan or LED and turn it on again to cancel the timing function.

8. If the remote control fails or the remote control is reconfigured, you can rebind the remote control. The specific method is: long press the LED switch button on the lampshade, and when you see the red light flashing on the indicator light, press any button on the remote control. When the red light on the lampshade disappears, the binding is successful.

9. The remote control uses a universal 3V button battery, model "CR2016". The default configuration of the remote control battery can be used for about 2-5 years. Later, users can replace the remote control battery by themselves.




Expanded Functionality

1. It can be assembled with a tripod to become a floor fan (the tripod is not included in the product and needs to be purchased separately)
2. There is a 1/4 British nut interface on the back of the fan. If you have ordered a tripod, you can use it in conjunction with the tripod. Rotate the nut on the top of the tripod into the nut interface on the back of the fan and tighten it to assemble it into one piece.



3. After loosening the tripod and the adjustment knob, open the three supporting legs of the tripod to the maximum range, then rotate the adjustment knob in the opposite direction and tighten it, and then adjust the corresponding height as needed.

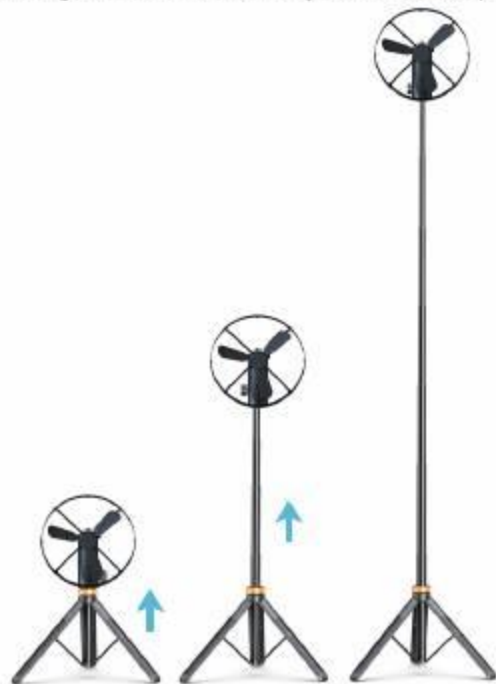

4. DC input interface. If you have purchased additional accessories such as a car power cord, when the energy treasure runs out of power, you can use the DC plug of the car power cord to plug into the DC interface of the fan to power it.



Cigarette Lighter Wire

(Not configured, can be purchased separately)

Precautions

1. The fan blades are equipped with a safety protection function. When a person or object touches the fan blades, the fan will activate the protection function to stop the blades from rotating, and the indicator light will flash. When the touch is removed, press the lampshade or the fan switch on the remote control again to turn the fan back on.
2. Be sure to add a blade protection cover when using it to reduce the chance of accidental touch.
3. Do not allow minors under the age of 14 to use this product, and place it out of their reach.
4. Please keep away flammable and explosive items when using it.
5. Do not expose this product to rain or immerse it in water.
6. Do not use solvents or polishing agents when cleaning the surface.

